

Workflow 2: Accessing the working units and Coordinate Readout dialog



The workflow below explains how to determine what the MicroStation Working Units settings are for the active design file. The dialog box that displays the Design File settings also allows the user to change those settings. Changing these settings will no longer affect the size of elements within the design file. Furthermore, if the user selected the correct seed file, there is no need to change these settings.

1. From MicroStation select *Settings>Design File*.

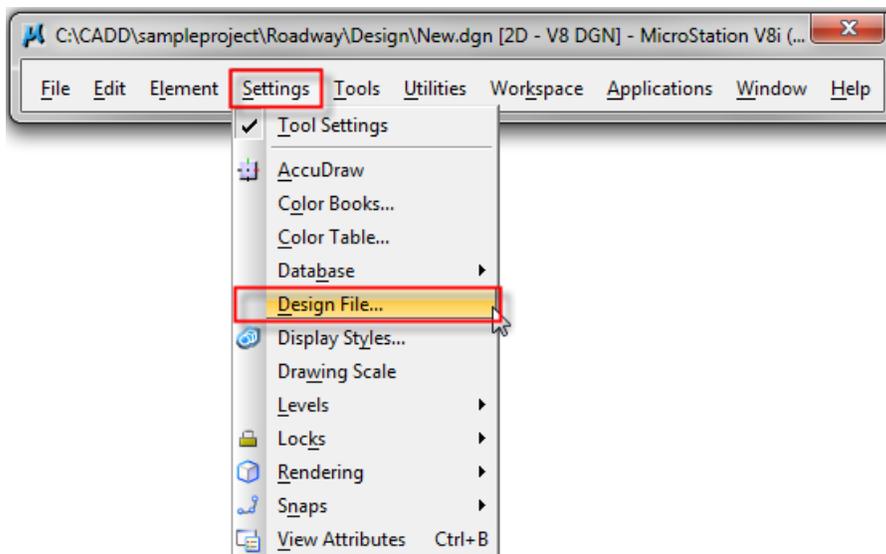


Figure 4-1: Accessing Design File Settings

2. From the design file dialog box select *Working Units or Angle Readout*.

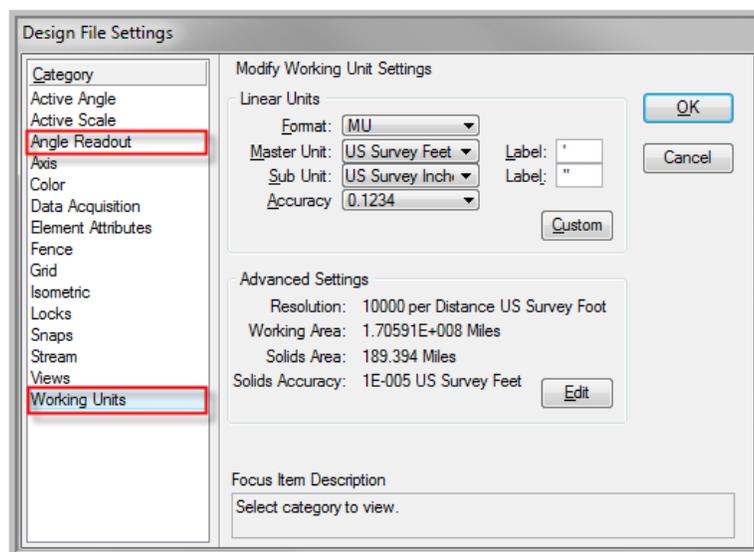


Figure 4-2: Design File Settings