



STATE	PROJECT	SHEET NUMBER

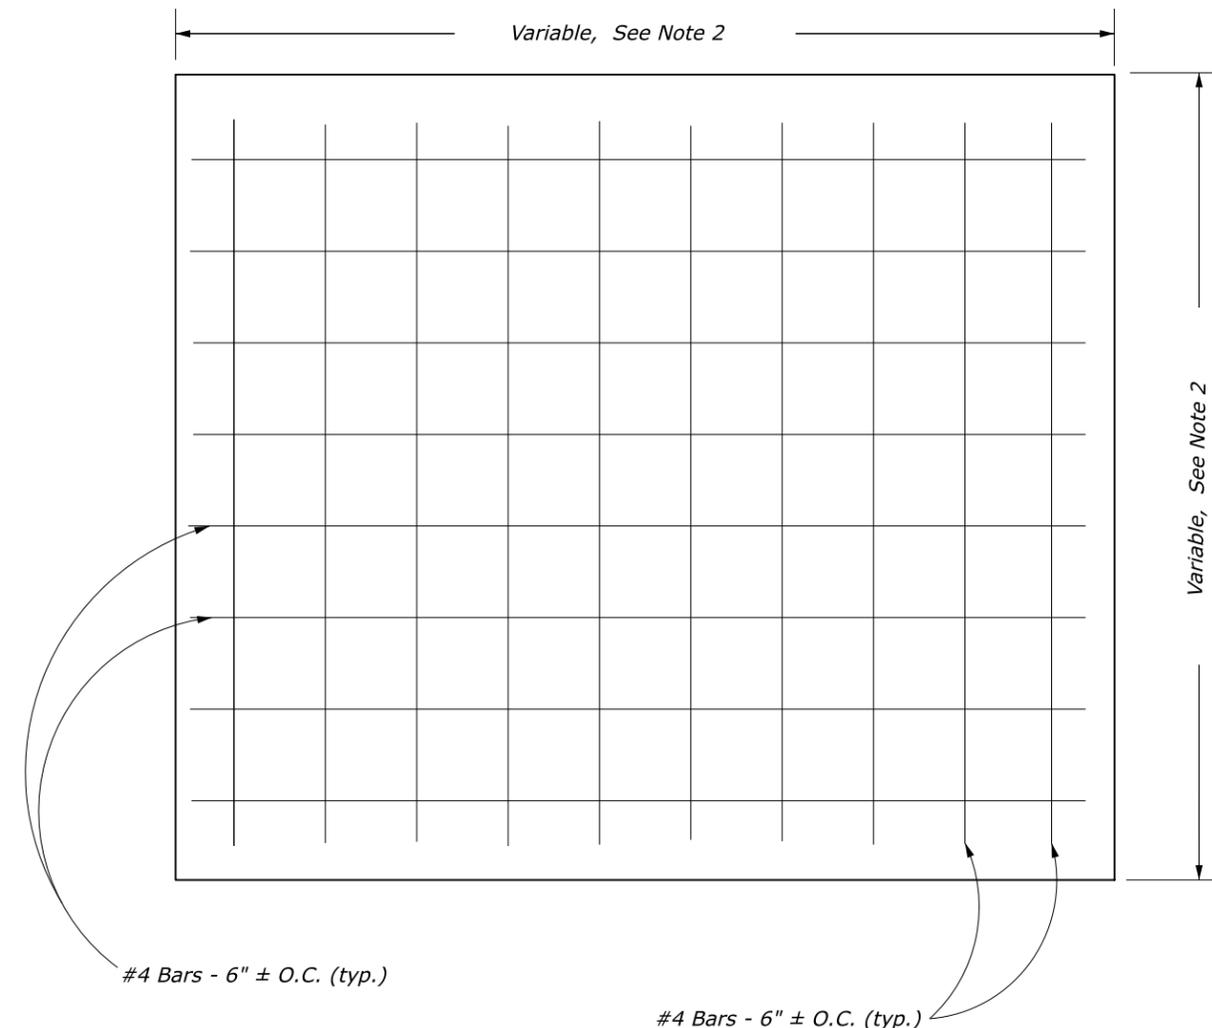

PLAN

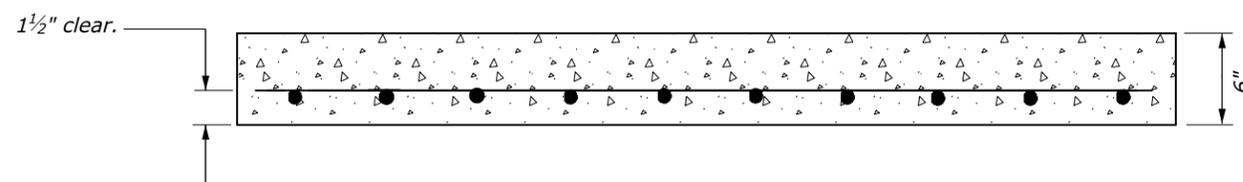

SECTION

NOTES:

1. Set concrete cap on a 2-inch mortar bed.
2. Field measure the length and width of the caps to completely cover the existing inlets.
3. Cut the top of the existing inlets to a depth such that 6 inches remain above the highest existing culvert tying into the inlet.
4. Provide a 1 1/2-inch clearance to the outside face for all reinforcing bars.

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION OFFICE OF FEDERAL LANDS HIGHWAY	
EFLHD DETAIL	
PRECAST CONCRETE INLET CAP	
DETAIL APPROVED FOR USE	DETAIL
APPROVED: MAY 2011	E604-08
REVISED: SEPTEMBER 2020	