

## Notes to the Designer

Updated September 2023

### Underdrain

#### General Information

- All graphics and text will be in the design and drawing models. Only use the sheet model for printing.

#### Applicable SCRs

- None

#### Typical Pay Item Used

- 60501-0000 Standard underdrain system [LNFT]
- 60502-0000 Geocomposite underdrain system [LNFT]

#### Updates


- **June 2021**
  - Updated for OpenRoads Designer
- **September 2023**
  - Updated border; updated to international foot seed

C:\Users\Stephen.Chapman\OneDrive - DOT OST\CADD\cells\FLH-Cells.cad [Base: B.US]  
20 September 2022 11:21 AM


PROJECT	SHEET NUMBER

NOTE:


1. Install underdrain at a 5 foot depth unless shown otherwise. Construct the flowline gradient parallel to the roadway, unless solid rock is encountered, or gradient is required at the outlet.
2. Use the minimum width required for installation.
3. Fill and compact the top 12 inches of the trench with impermeable material (A4-A7 soil).
4. Cover the end of the outlet pipe with screen according to subsection 605.03. Hold the screen securely in place with standard coupling bands or by other approved means.
5. Mark the outlet of the underdrain with a delineator post or other suitable marker.
6. Furnish geocomposite sheet drain meeting the requirements of subsection 714.02.
7. Furnish collector pipe, outlet pipe and fittings meeting the requirements of subsection 708.04.
8. Furnish geotextile filter type conforming to subsection 714.01(a). See summary tables for class and type.

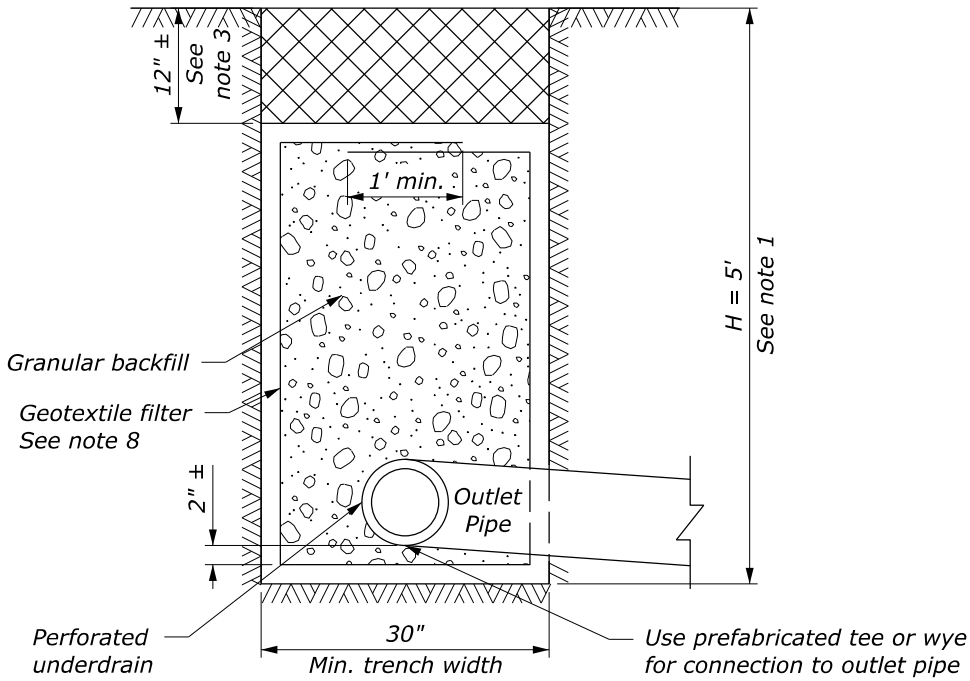


STANDARD UNDERDRAIN

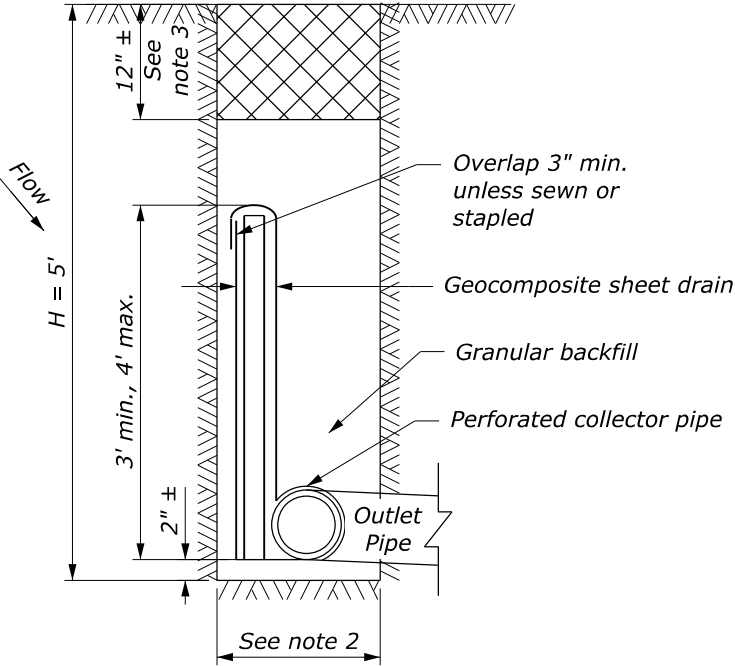

GEOCOMPOSITE UNDERDRAIN

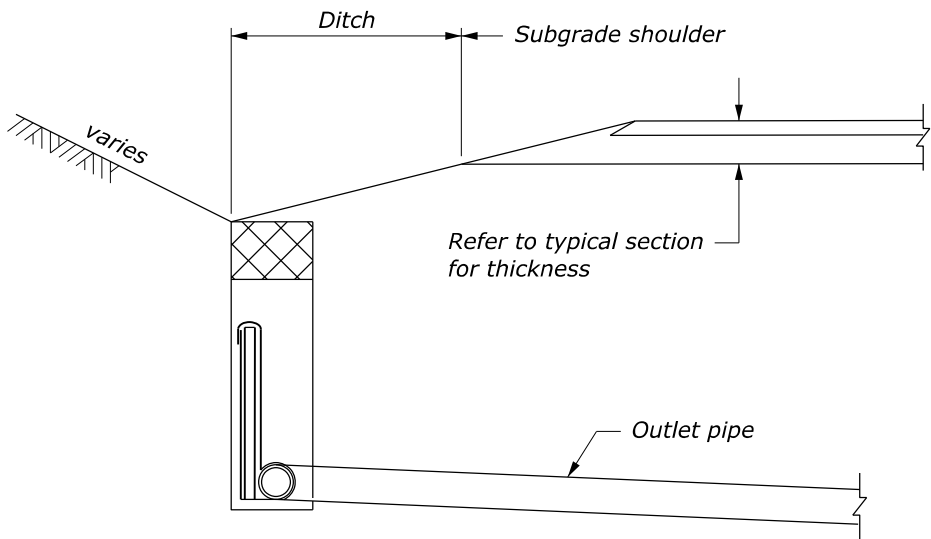

STANDARD UNDERDRAIN OR GEOCOMPOSITE UNDERDRAIN LOCATION

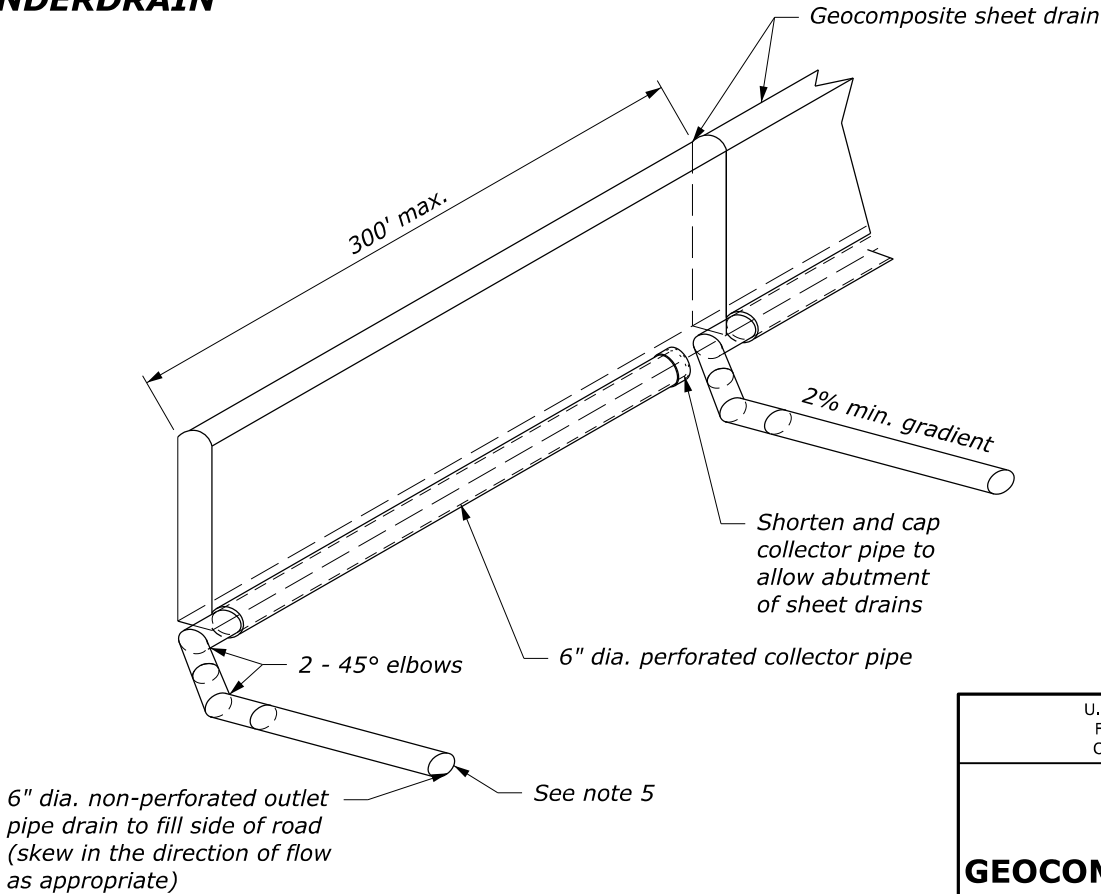

OUTLET PIPE DETAIL

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION OFFICE OF FEDERAL LANDS HIGHWAY	
CFLHD SPECIAL	
STANDARD AND GEOCOMPOSITE UNDERDRAINS	
	SPECIAL 605-A